

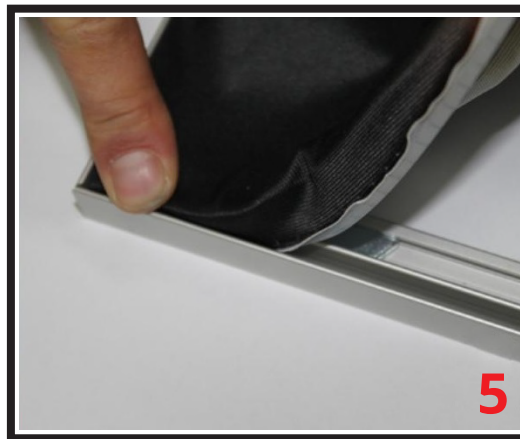
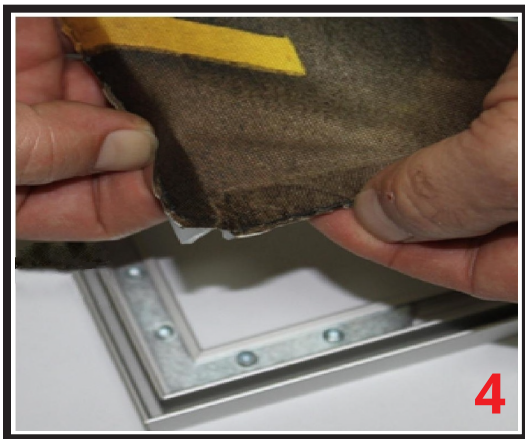


ASSEMBLY INSTRUCTIONS

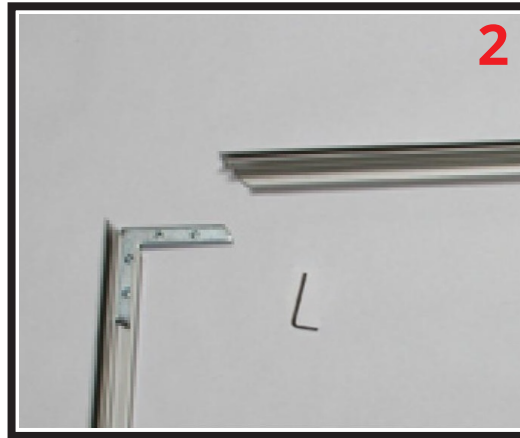

1. Locate all the pieces (4 extrusions, 4 corner angles, 1 Allen key).
2. Assemble the frame with the corners and screw with the Allen key.
3. Once assembled, the frame will have the opening for the canvas in the front.
4. Take the canvas and fold the silicone rod inwards to form an angle of 90 degrees.
5. Insert into the frame starting with the 4 corners. Afterwards, insert the other surfaces.
6. Once the canvas is inserted, slide your fingers lightly over the outline to even out the surface.
7. Admiring your new frame.

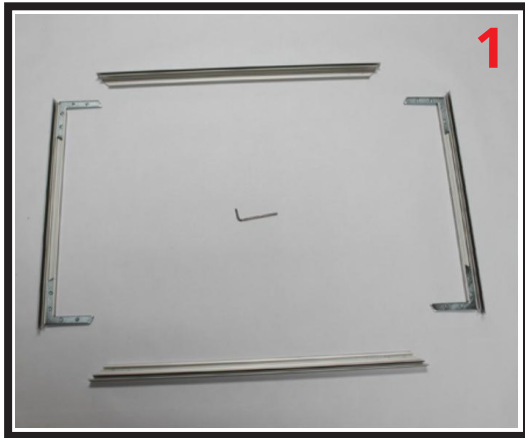